



REMOVE CLUTCH RELEASE BEARING

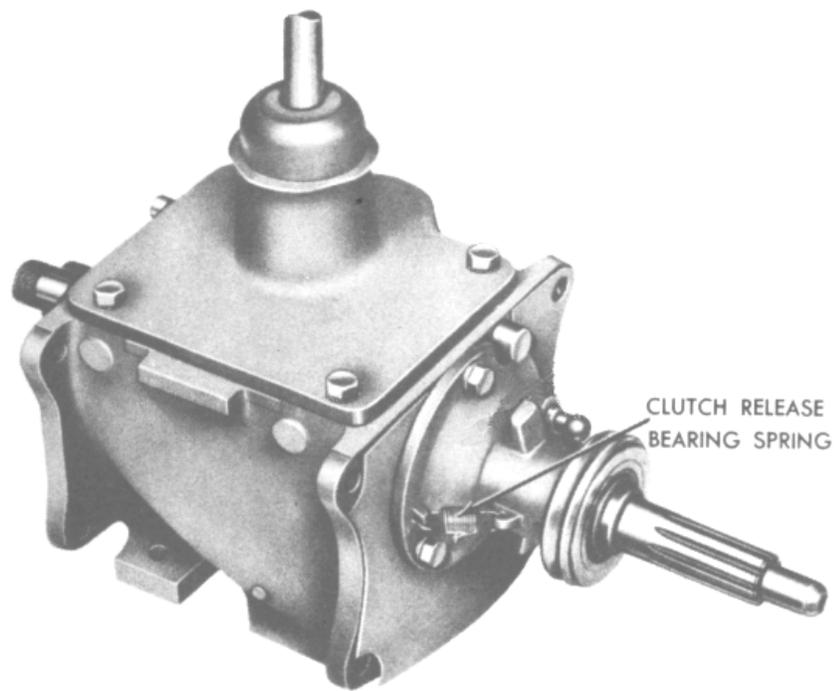

Note that shift plate is an early one without the "U" welded in. See pages 12 and 13 for details.

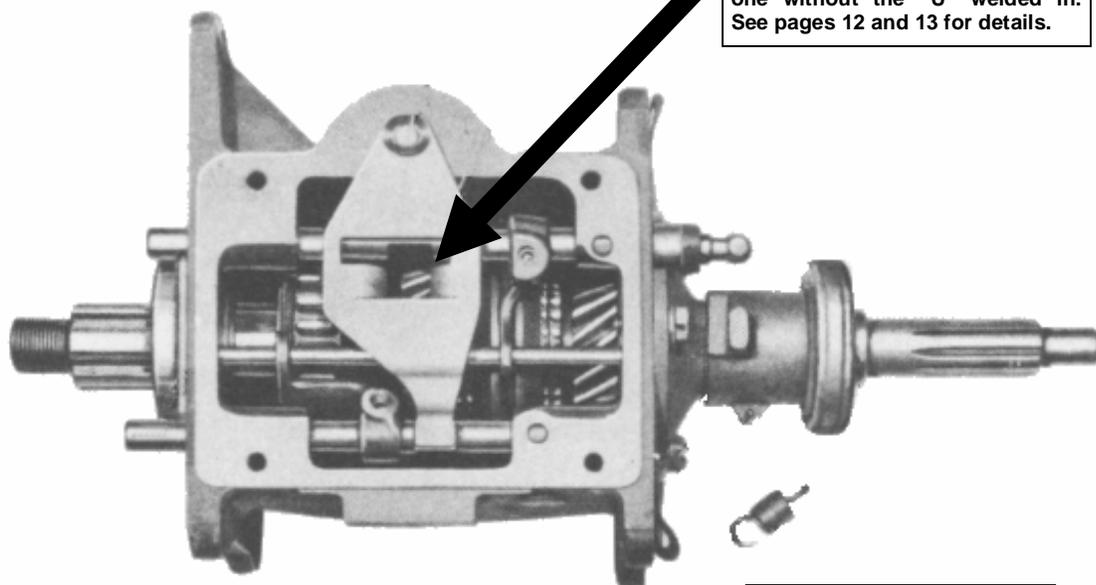

Unhook the clutch release bearing return spring.

Source: TM 9-1803B